



GMXA Disc Brake Caliper - Pneumatically applied Spring released

Nominal diamemsions given For caliper dimensions see DS2600

DS2601

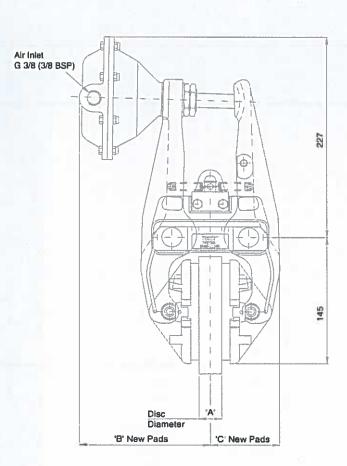

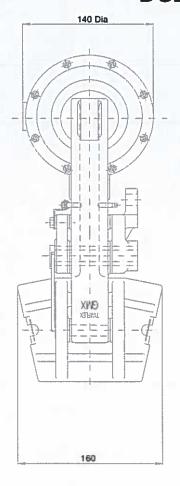

7		(DISC DI	AMETE	A mm	610	710	81	10	915	
_ 6											
- bar											
Ë 4											
SSU.											
SES 2											
AIR PRESSURE - bar							Махіп	ım Pres	sure 7	bar	
₹ 0											
Č	30	0 60	00 90						00 2	700	3000
	BRAKING TORQUE - Nm										

	Dimensions in mm				
Caliper	Α	В	С		
GMXA 25	25	180.5	76		
GMXA 30	30	182	77.5		
GMXA 40	40	185.5	81		

Weight (caliper and thruster) - 10.57kg (thruster only) - 1.35kg Volume displacement of thruster at full stroke is 300ml.

Maximum Braking Force = 7kN @ 7

The ratings shown on the above graph are based on fully bedded and conditioned brake pads with nominal frictioncoefficient µ= 0.4.


For bedding-in and conditioning procedures see Publication M1060.

Braking Force is defined as the Tangential Force acting on the brake disc at the Effective Disc Radius.

Braking Torque (Nm) = Braking Force (N) x Effective Disc Radius (m)where Effective Disc Radius = Actual Disc Radius -0.06.

Twiflex Disc Brakes must be used with Twiflex asbestos free brake pads. The use of any other brake pads will invalidate the warranty. Twiflex Limited reserves the right to modify or change the design without prior notice.

GMXA Disc Brake Caliper - Pneumatically applied Spring released

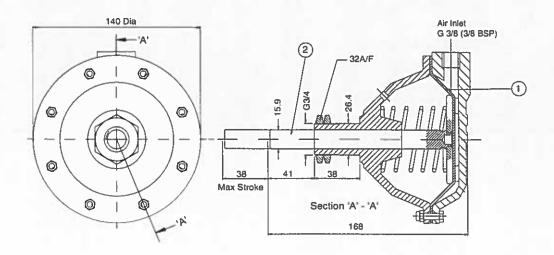

Thruster part number 7200056

AVAILABLE SPARES					
item	Component	Part No.			
1	Diaphragm Kit	7902801			
2	Piston Rod Assembly	7200493			

This range of pneumatically operated brakes uses dry and filtered compressed air at pressures up to 7 bar Pneumatic brakes require a control valve which may be operated either manually, or by pneumatic or electrical signal Should it become necessary to replace a diaphragm, ensure air supply is disconnected, remove the M5 fixing screws and the rear cap of the thruster. Remove the worn diaphragm; clean-up the contacting surfaces and re-assemble with the new diaphragm and fixing screws in position.

Thruster Fitment

- Offer thruster to caliper makinging sure that both lock nuts are removed before placing push rod through caliper arm.
- Fit lock nuts over the push rod and locate it's end within the slot of the arm
- 3 Tighten one lock nut to 50-60 Nm then tighten the second nut against the first



